



READ BEFORE




INSTALLING 66B BURNER ASSEMBLY

Improper Burner Assembly positioning could result in severe damage to the Assembly and will VOID any product Warranty on the Burner Assembly !!

When installing your 66B Burner Assembly into the heater case make absolutely certain you position the assembly correctly in the case. The burner plate has to be positioned correctly to prevent heat from escaping backwards into the main casing. Wrong positioning could severely damage the unitrol control beyond use and it will then need to be replaced. This type of damage **IS NOT** covered by the Warranty. To prevent this, follow these instructions closely.

When installing make certain the burner assembly is positioned in the case as shown below. Use a flash light and check inside the casing to verify the plate is positioned properly. **DO NOT** turn the main burner on if the plate is not against the flue properly. Re-position the plate then ignite the burner and make certain the excess heat is escaping from the flue and not entering the main casing.

If water enters the tube holding the heat sensing bulb from blowing snow or blowing rain and then freezes, it will crush the heat sensing bulb. If this occurs the whole Unitrol unit will have to be replaced. This type of damage **IS NOT** covered by the Warranty. To prevent this from occurring, fill the tube with vegetable oil.

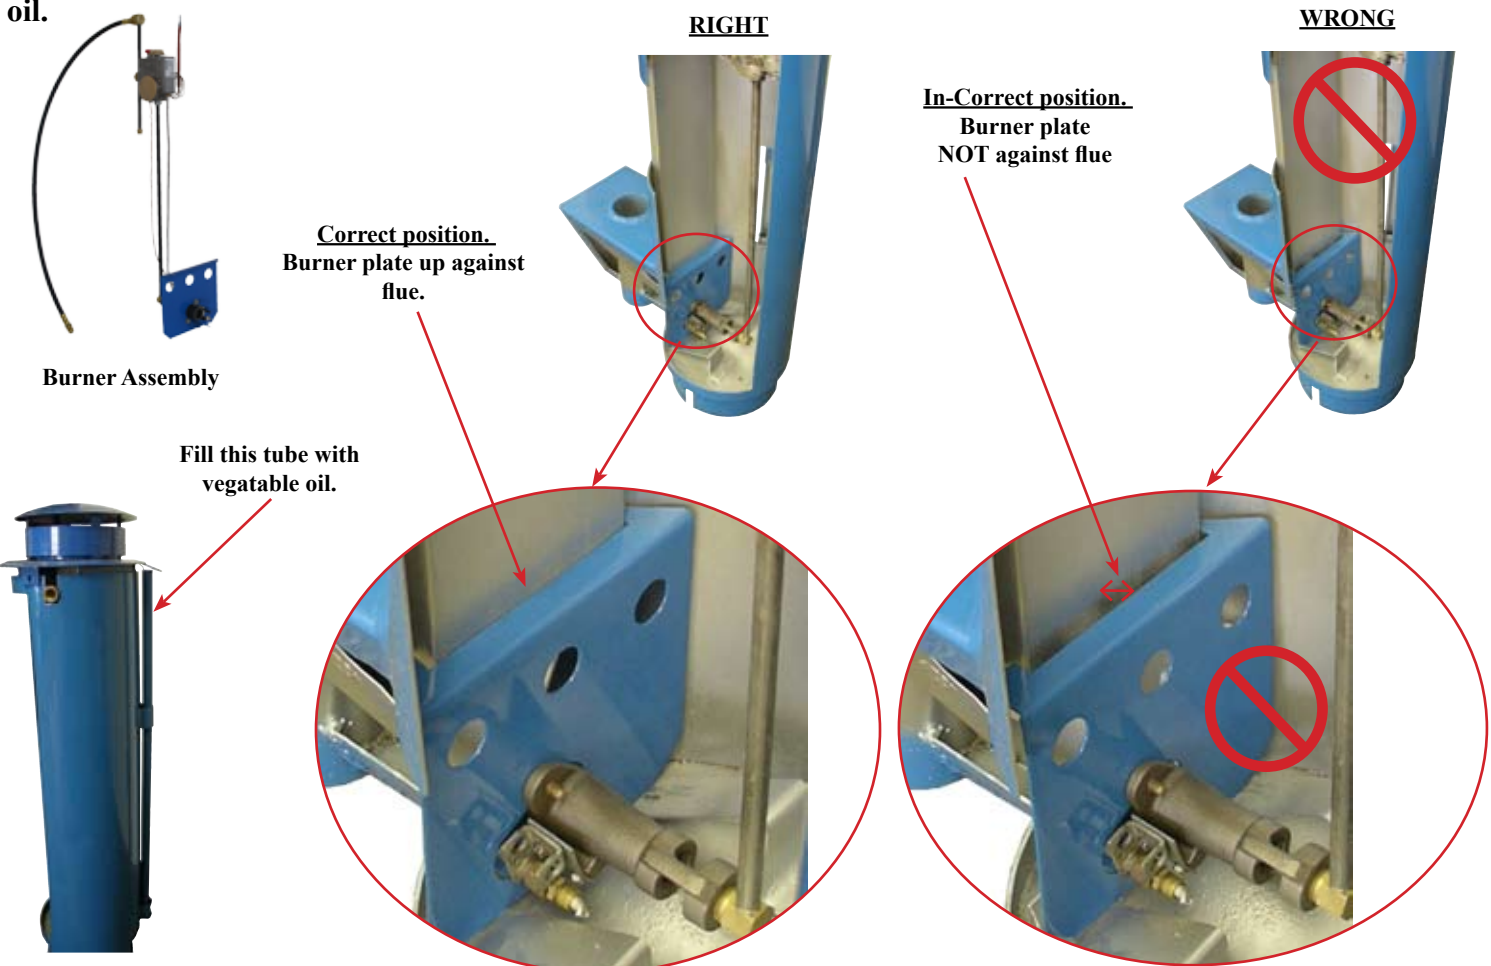

If you experience any problems or wish to speak to a representative regarding your installation please call **1-800-279-1770**. Additional answers to questions may be found on our web site, www.trojanlivestock.com, under "Frequently Asked Questions".