




TROJAN SPECIALTY PRODUCTS

INSTALLATION INSTRUCTIONS PIPE-N-HOT HEATER

Part #: 12523

Installation instructions for Pipe-N-Hot heater used on 1/2" to 1" copper, galvanized, or plastic supply line of automatic electric water fountains.

1. Disconnect power from fountain before connecting Pipe-N-Hot leads to the 120 volt power source through thermostat in fountain (100 watt heater, 0.8 Amps).
2. Each end of the Pipe-N-Hot has two springs. Use the spring with the hook on it to hold the heater bracket to the supply line. Do not run the supply line between the other spring and the bracket.
3. Slide heater down as far as lead wires will permit.
4. The bracket will space the heater a safe distance from the pipe and keep the pipe from contacting the tile. Combustible material such as electric supply line, must be kept from contacting heater.

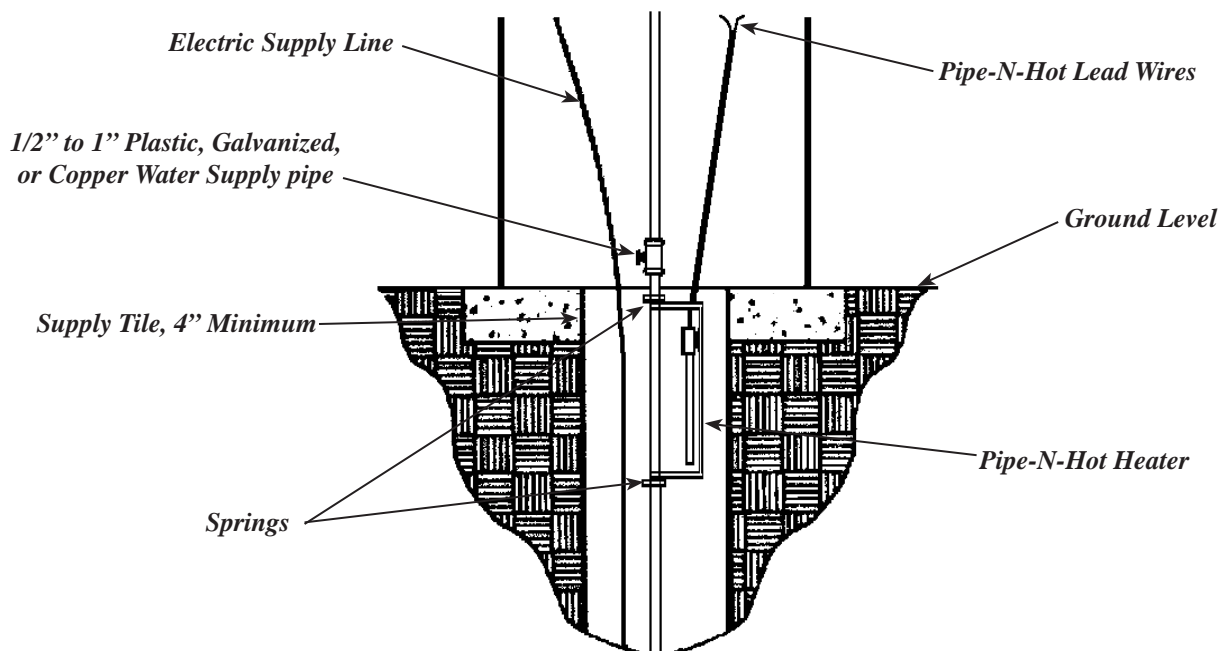

WARRANTY FOR TROJAN SPECIALTY PRODUCTS

TROJAN SPECIALTY PRODUCTS, warrants product to be free of defective materials and workmanship. Defective part(s) will be repaired or replaced, at the option of TROJAN SPECIALTY PRODUCTS. This warranty specifically excludes all labor and shipping charges.

This warranty does not apply to any appearance items, to any product whose exterior has been damaged or defaced, to any product subjected to misuse, abnormal service or handling, and to any products altered or repaired with other than original equipment manufacturers parts. The period of warranty begins at original date of purchase and extends for one year.

All warranty claims must be processed thru TROJAN SPECIALTY PRODUCTS.

Beck Sales Company, Inc. 'dba' TROJAN SPECIALTY PRODUCTS
10860 U.S. Hwy 50 — P.O.Box 1735 — Dodge City, Ks 67801
Toll Free: 800-279-1770 — Phone: 620-225-1770 — FAX: 620-225-6521
E-mail: info@becksales.net — Web: www.trojanlivestock.com